



1 |

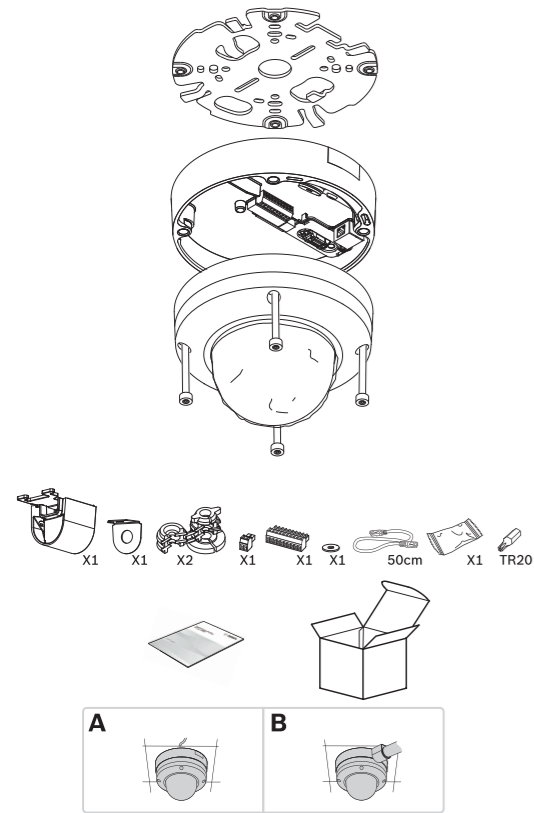


2 |


PIN	Connection
1	+12V OUT
2	GND
3	ALARM OUT
4	ALARM OUT
5	GND
6	ALARM IN1
7	ALARM IN2
8	GND
9	AUDIO IN
10	AUDIO OUT

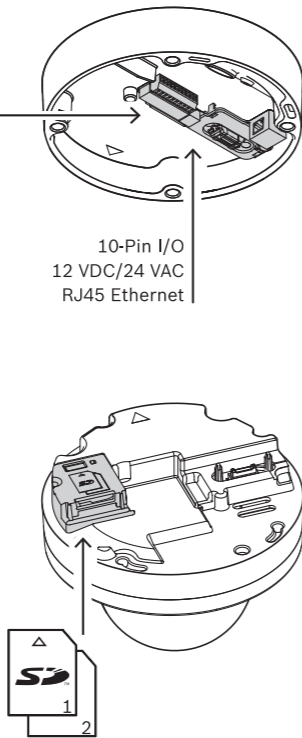


3 |

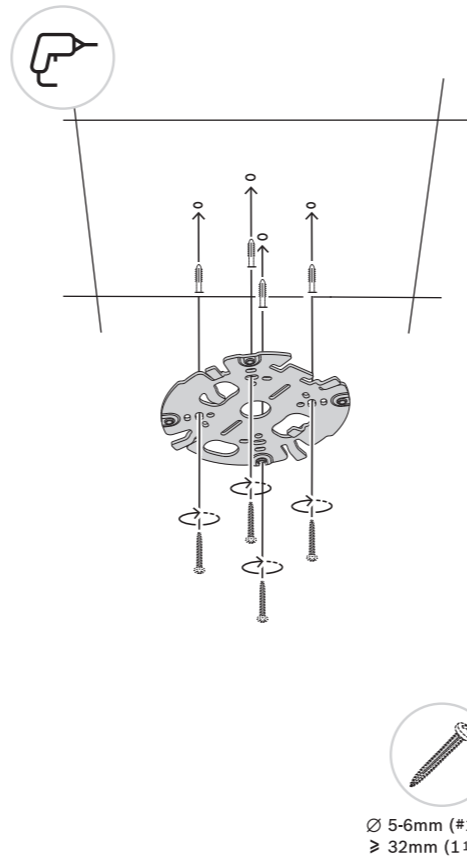


4 |

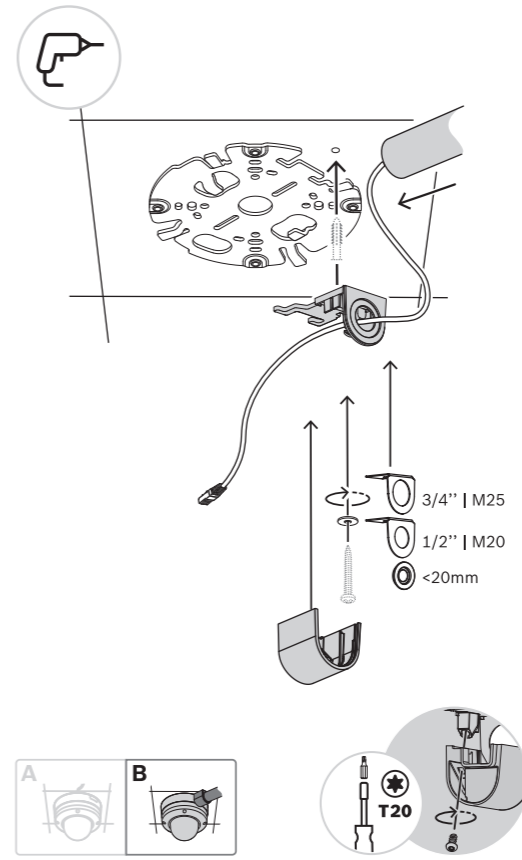


5 |

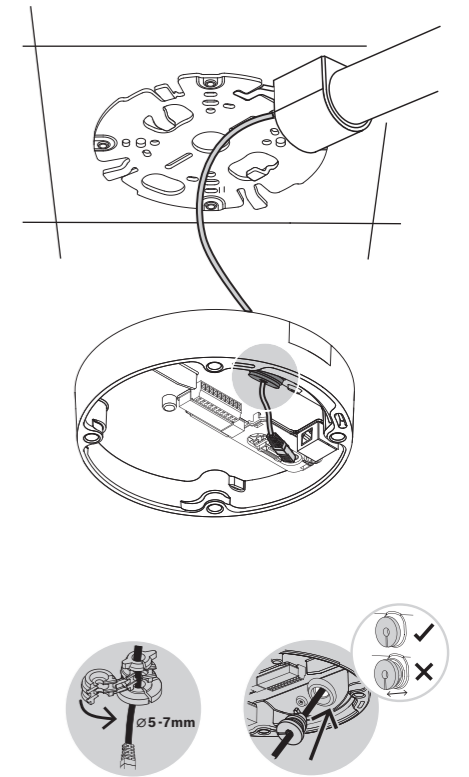


6 |

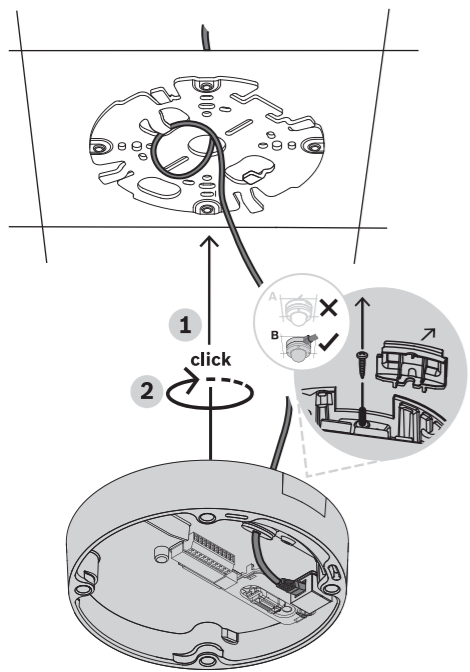


7 |

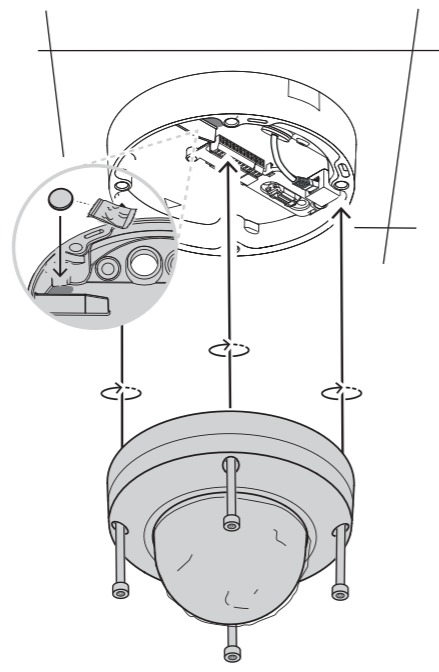

8 |

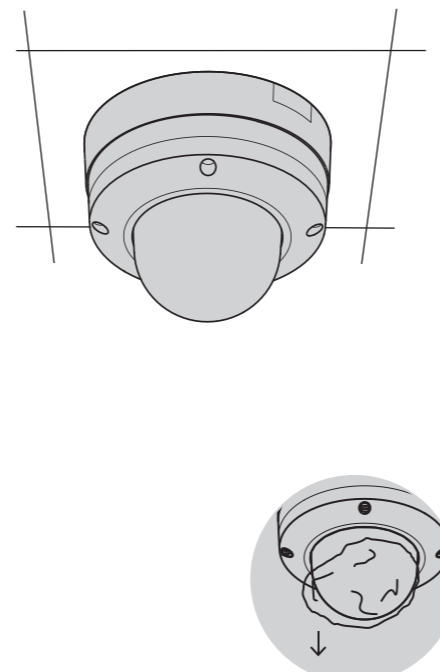


9 |

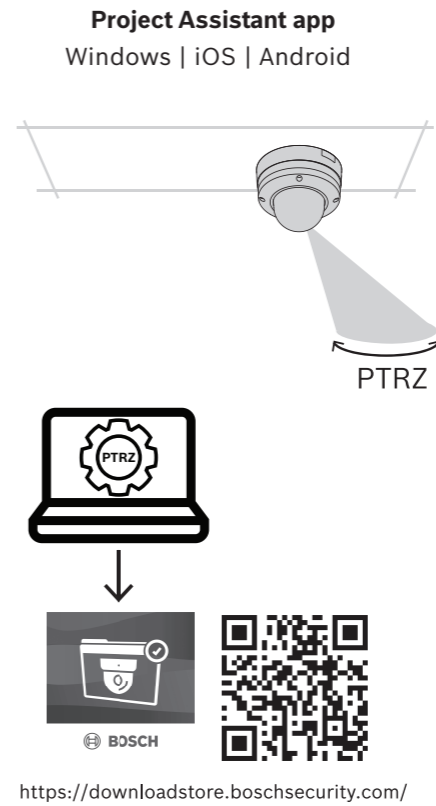

FLEXIDOME IP starlight 8000i

NDE-8512-R | NDE-8512-RT | NDE-8513-R |
NDE-8513-RT | NDE-8514-R | NDE-8514-RT |
NDE-8512-RX | NDE-8512-RXT | NDE-8513-RX |
NDE-8513-RXT

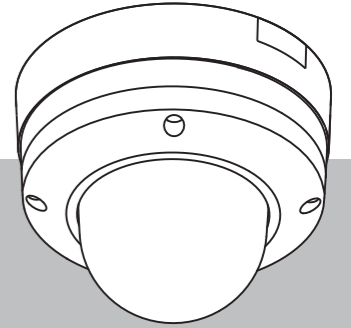

en Quick installation guide

Bosch Security Systems B.V.
Torenallee 49
5617 BA Eindhoven
Netherlands
www.boschsecurity.com
© Bosch Security Systems B.V., 2022